

# Brilcaf — Coffee Machine Descaler

Descales the inside without touching the taste.

BH0218

---

## In short

- 375 g
- For the internal components of coffee machines
- Removes limescale and coffee deposits
- Leaves no residue after rinsing
- Does not alter the taste of the coffee

## How to use it

Fill the tank halfway with water and add the whole bottle. Switch the machine on and run about 100 ml — two or three cups — through the steam wand. Switch off, wait 15–20 minutes, then let the rest run out a little at a time through both the steam wand and the coffee spout until the tank is empty. Rinse the tank, fill it with clean water and run it all through the same way. Brew a couple of test coffees and pour them away. If your machine has a descaling programme, follow its maker's instructions.

## Worth knowing before you buy

- For heavy scale, run a second cycle. For upkeep, a full cycle every 30–40 days.
- Safe for the machine's plastic parts, seals and pipes.
- Causes serious eye irritation — protect eyes and face; if irritation persists, see a doctor.